


How to reset a Switch2

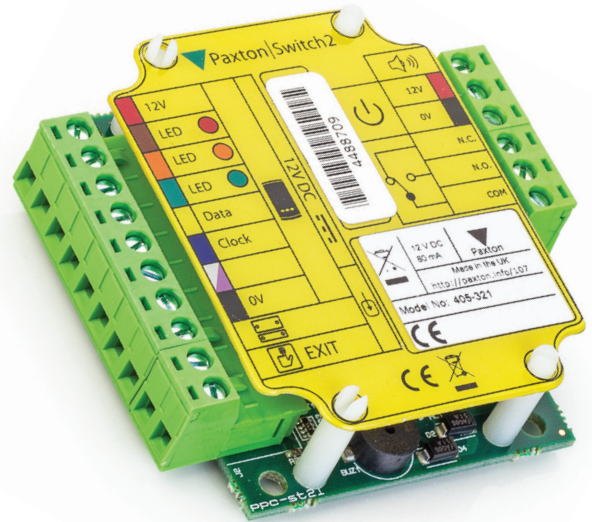




What is a Switch2 system?

A Switch2 system is a step up in security and versatility from the compact range. Still operating as a standalone system it uses a control unit that is separate from the user interface; a simple data cable linking them together. This means that the control unit can be mounted on the 'safe' side of the door with only the keypad or reader outside.

A Switch2 control unit can be used with any of the readers in the Paxton range. It has inputs for a door contact and an exit button and has an output for an alarm sounder. Lock control is via a volt free relay which can be wired to operate fail closed and fail open locks.



How to reset a Switch 2

-  Disconnect the power and disconnect the wires from the **Green** and **Mauve** terminals
-  Insert a wire link between the **Green** and **Mauve** terminals
-  Reconnect the power (the unit will beep 4 times)
-  Disconnect the power and remove the link wire, reconnect the **Green** and **Mauve** wires
-  Reconnect the power (the unit will beep 3 times per second). The unit is ready to be enrolled