

# Specifications

Min

Max

Dimensions		28 mm		
Width		28 mm		
Length		49 mm		
Height		12 mm		
System Specification				
Carrier frequency		125 KHZ		
		2.4 GHz		
Environment				
Operating temperature		0 °C	55 °C	
Electrical				
Typical battery life			3 years	
Battery type		CR2032		
Read range with hands free token				
*** The distance between hands free interface and the reader must be no more than 15m ***				
P38				0.85 m
P50				1.1 m
P75				1.5 m
P200				2.5 m
P200E metal mount				2.0 m
Long range reader				5.0 m

# CE 0889

Paxton Access Ltd hereby declares that this product is in conformity with all the essential requirements of Directive 1999/5/EC. This equipment is intended for use in all EU and EFTA countries and all other countries worldwide.

The declaration of conformity is available on request.  
Contact details are provided at: <http://paxton.info/596>

SAFETY WARNING

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

© Paxton Access Ltd 2014

13/03/2014



# Paxton

Ins-30099 Hands free keyfob for Net2



## Technical Support

☎ 01273 811011



support@paxton.co.uk

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

Compatible with hands free readers

Compatible with non hands free readers

'Hands free' means that the token can be read from within a pocket or handbag when used in conjunction with a P series reader equipped with a hands free interface.

The keyfob has been designed with features to maximise battery life. This includes the prevention of repeated access requests to the same door whilst the keyfob remains in range. However, heavy use or keeping the keyfob in the reader field can still reduce battery life to 12 months or less.

## Battery replacement



Remove the small retaining screw. Insert a flat head screw driver into the groove in the corner below the screw position and gently twist to prise the case open.

Replace the battery, clip the cover closed and secure with the retaining screw.