

Connecting a Bioscrypt V-Series reader to Net2

Overview




These connections are common for the following Bioscrypt readers:

V-Prox: A fingerprint reader with the option to connect an external card reader

V-Pass FX: A fingerprint only reader V-Smart: A combined fingerprint and proximity reader, supporting MIFARE, iClass and DESfire tokens.

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
-	Green LED
Green	Wiegand D0
White	Wiegand D1
-	NOT USED
Black & Black/White	0V

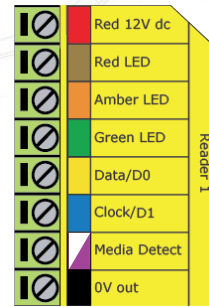

Ensure any unused wires are safely terminated.

Bioscrypt recommend that the Green/Yellow cable must be earthed independently of the control unit to ensure the reader chassis is correctly earthed.

The users must first be enrolled on the reader (standalone mode) or VeriAdmin software. Once this is configured, the reader is configured as a desktop reader in the Net2 software, and the users enrolled into Net2.

The output from the Bioscrypt V-Series readers is configurable up to 64 bits, so a custom Wiegand format may need to be set up in the Net2 software.




+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support




+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support




+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support




+1(800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support