

Connecting a Deister PRX5 proximity reader to Net2

Overview




The output from the reader can be either Clock/Data or Wiegand, so please refer to Deister for this information if unknown. If the output is Wiegand, the bit pattern will be dependent on the encoding on the tokens, and this will need to also be confirmed so the correct settings can be applied to the Net2 software.

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.

Cable Pinout	ACU terminal
3	+12V
8	Red LED
-	Amber LED
7	Green LED
5	Wiegand D0
4	Wiegand D1
-	NOT USED
0 & 6	0V

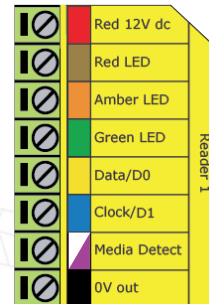


Ensure any unused wires are safely terminated.

 +44 (0)1273 811011
 support@paxton.co.uk
 paxton.support


 +49 (0) 251 2080 6900
 support@paxton-gmbh.de
 paxton.gmbh.support


 +33 (0)157 329356
 support@paxtonaccess.fr
 paxton.support


 +32 (0)78485147
 support@paxton-benelux.com
 paxton.benelux.support


 +31 (0)76 3333 999
 support@paxton-benelux.com
 paxton.benelux.support

 +27 (0)21 4276691
 support@paxtonaccess.co.za
 paxton.support

 +1(800) 672-7298
 supportUS@paxton-access.com
 usapaxton.support

 +11 5715088198
 soporte@paxton-access.com
 paxton.soporte

 +1 (864) 751-3501
 soporte@paxton-access.com
 paxton.soporte

 8000 3570 3783
 support@paxtonaccess.ae
 paxton.support

 +44 (0)1273 811011
 support@paxton.co.uk
 paxton.support