

Connecting a IDTECK FGR006 biometric reader to Net2


Overview

The IDTECK FGR006 biometric reader will need to be configured as per the instructions supplied with the reader.

Once correctly configured, the Net2 ACU will need to be set up as a desktop reader, so the users can be added into the Net2 software.



Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Blue	Green LED
Green	Wiegand D0
White	Wiegand D1
-	NOT USED
Black	0V

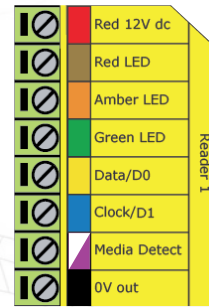

Ensure any unused wires are safely terminated.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1(800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support