

Connecting IDTECK RF range proximity readers to Net2

Overview


The IDTECK RF10, RF20, RF Tiny & RF30 all connect to the Net2 ACU in the same manner.

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.



Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Yellow	Green LED
Green	Wiegand D0
White	Wiegand D1
-	NOT USED
Black	0V

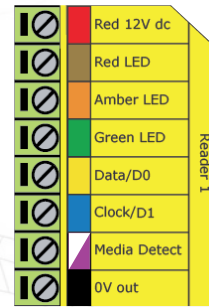

Ensure any unused wires are safely terminated.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1(800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support