

Paxton

# Configuring readers and keypads

# Data formats

Paxton

If the Net2 application is running when a token is presented to a reader or a button pressed on a keypad for the first time, the unit will configure itself in the software automatically.

Some individual settings may need to be set manually. Readers and keypads are configured in the Door settings of each control unit.

The display below shows the settings corresponding to Reader 1 and Keypad 1 connected to that control unit.

| e <u>V</u> iew <u>G</u> o <u>T</u> ools <u>O</u> ptions <u>H</u> el  | D  |  | 5- 10- 10-       |
|--|--|--|------------------|
| Back - 📄 - 💦 Refre   |  | Open door 🛛 🥥 New user 👻   |                  |
| Net2 Access Control  | Main Entrance  |  |                  |
| <ul> <li>Events</li> <li>Users</li> <li>Timezones</li> <li>Doors</li> <li>Main Entrance</li> <li>Areas</li> <li>Anti-passback</li> <li>Reports</li> <li>Roll call</li> <li>Net2 operators</li> </ul> | ACU serial number: 12345678<br>Door name<br>Door open time (seconds)   | Main Entrance  | Apply<br>Cancel  |
|  | Unlock the door during   | At no time   | <u>Open door</u> |
|  |  | Only unlock the door once a user has been granted access Silent operation  | Identify         |
|  | Reader 1   Reader 2   Alarm   Codes   Events   Fire alarm inputs   Intruder Alarm   Access rights  <br>Reader details  |  |                  |
|  | Name   | Main Entrance (In)   |                  |
|  | Reader type  | Paxton reader  | •                |
|  | Keypad type  | Paxton keypad  |                  |
|  | Token data format  | Default  | ✓ New format     |
|  |  |  |                  |
| Net2 actions   | Operating mode   |  |                  |
| Open door  | Operating mode<br>Reader operating mode  | 🔝 Token only   | •                |
|  | Reader operating mode  | E Token only<br>is allows for different reader operation during a selected timezone.   | •                |
| Open door  | Reader operating mode  |  | •                |
| Open door  | Reader operating mode  | is allows for different reader operation during a selected timezone.   |                  |
| Open door Log off Net2 details Anin Entrance   | Deraang mode<br>Reader operating mode<br>I Timed operating modes - Thi<br>During this timezone:<br>This reader will operate as:<br>Reader action - This is what will | is allows for different reader operation during a selected timezone.<br>Dut of Hours   |                  |
| Copen door   | Deraang mode<br>Reader operating mode<br>I Timed operating modes - Thi<br>During this timezone:<br>This reader will operate as:<br>Reader action - This is what will | is allows for different reader operation during a selected timezone.           Out of Hours           Image: Token plus PIN           happen when a valid access is granted. |                  |

### Name

The default name for reader 1 is [Door name] (IN). The default name for reader 2 is [Door name] (OUT). The reader names set here will appear in reports and be used to set access levels and areas.

# Reader type

This should be set to the relevant type of reader.

#### Setting

None Paxton reader Clock and data Wiegand reader ANPR - Clock and data reader ANPR - 26 bit Wiegand reader

#### Description

If no reader is connected If a CARDLOCK or PROXIMITY reader is connected If a non-Paxton clock and data reader is connected (Paxton readers are clock and data readers) If a Wiegand reader is connected If a Paxton ANPR clock and data reader is connected If a Paxton ANPR wiegand reader is connected

# Keypad



Refer to: AN1112 - How to configure a Wiegand keypad < http://paxton.info/1650 >

Setting None Paxton keypad

Description If no keypad is connected If a keypad is connected

# Token data format

Every card enrolled on a Net2 system must have a unique number. The token data format option allows Net2 to read a variety of encoding formats. The default setting is for the Net2 encoded cards and tokens (random 8 digit number). For details on how to set up a new token data format refer to: AN1045 - Using ABA format 3rd party cards with Net2. < http://paxton.info/1052 >

AN1125 - Configuring Wiegand 26 bits with a site code. < http://paxton.info/1753 >

| Setting                       | Description   |
|-------------------------------|---|
| Default                       | This is for Net2 encoded cards and tokens (random 8 digit number  |
| Paxton token                  | This is for CARDLOCK and PROXIMITY cards and tokens (encrypted number)  |
| Bank cards                    | This allows Net2 to use bank cards  |
| First 8 digits                | This allows Net2 to use the first 8 digits encoded on the magstripe   |
| 26 bit Wiegand                | If a Wiegand reader is connected, Net2 is configured to read 26 bit Wiegand tokens  |
| 26 bit Wiegand with site code | If a Wiegand reader is connected, Net2 is configured to read 26 bit Wiegand tokens and check the site code.   |
| Custom Wiegand                | If a Wiegand reader is connected other than a 26 bit Wiegand reader. A Custom Wiegand format must be first set up in the Net2 Configuration Utility |

# Reader operating mode


The correct operating mode should be selected from the drop down menu.

| Setting             | Description   |
|---------------------|---|
| Inactive            | There is no reader or keypad connected (or they are inactive for some other reason)             |
| Token only          | Access is granted by presenting a valid user token  |
| Token plus PIN      | Access is granted by presenting a valid user token AND entering the relevant PIN                |
| Token plus code     | Access is granted by presenting a valid user token AND entering a valid code                    |
| Desktop reader      | A desktop reader is connected. This reader is to be used to add users to the system             |
| PIN only            | Access is granted by entering a valid PIN   |
| Code only           | Access is granted by entering a valid code  |
| Token or PIN        | Access is granted by presenting a valid token OR entering a valid PIN                           |
| Token or code       | Access is granted by presenting a valid token OR entering a valid code                          |
| Token, PIN or code  | Access is granted by swiping a valid card OR entering a valid PIN OR entering a valid code      |
| Clocking in reader  | For use with Timesheet software. Events from this reader will be sent to the Timesheet software |
| Clocking out reader | For use with Timesheet software. Events from this reader will be sent to the Timesheet software |
|                     |   |

The list of operating modes displayed in the drop down menu is dependent on the reader type and keypad type settings.

For example, if a keypad is configured without a reader, the drop down menu will only allow: Inactive, Code only and PIN only.

APN-1046-US

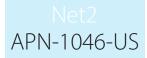

# Timed operating modes

This feature allows a different operating mode to be used depending on a timezone. For example, during the day, the door may be set to 'Token only' but out-of-hours this can be upgraded to require 'Token plus PIN'.

To configure this, tick the box, select the required timezone from the drop down menu and the required operating mode from the other drop down menu.

# Reader action

This is the action that will happen when access is granted.

| <b>Setting</b><br>Relay 1 - door open time | Description<br>Access granted will energise relay 1 for the door open time.                             |
|--|---|
| Relay 1 & 2 - door open time               |   |
| Relay 1 - toggles                          | Access granted will toggle relay 1 The relay will stay energised until a second access granted is made. |
| Relay 2 - toggles                          | As above but for Relay 2.   |

Further information: AN1124 - Two locks on one door < http://paxton.info/1780 >

# Doors\[Door name]\Reader 2

The Reader 2 tab shows the settings corresponding to Reader 2 and Keypad 2 connected to that control unit.