

Upgrading from PaxLock Pro to PaxLock Pro2

Overview


Follow these steps to safely remove a PaxLock Pro and replace it with a PaxLock Pro2.

Step 1: Remove the existing PaxLock and Lockset

1. Remove the current PaxLock Pro, spindle, and lockset from the door.
2. Dispose of the old PaxLock Pro and spindle according to local regulations

Step 2: Remove the T-Nut


- Remove the t-nut from the door.

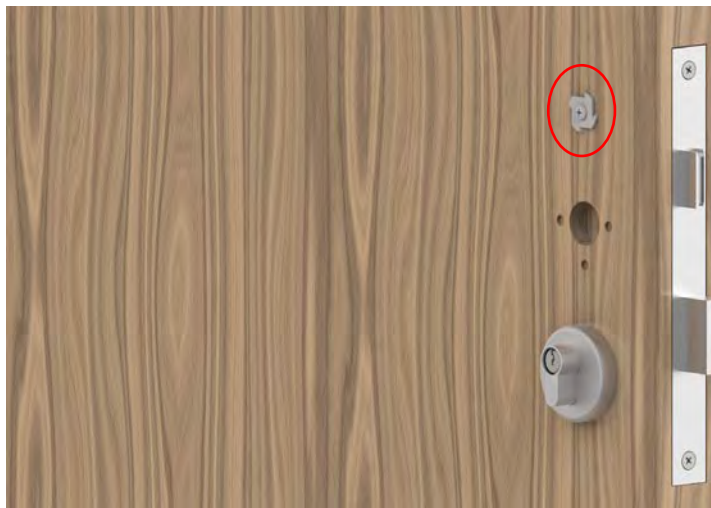

Step 3: Inspect the Lockset

Check the condition and suitability of the existing lockset for use with the PaxLock Pro2. The lockset must:

- Be DIN 18251-1 certified and feature the holes shown in the diagram below.
- Be in as-new condition.
- Be fully functional, with no apparent rubbing or friction within the mechanism.
- Feature a key override. This is highly recommended to allow access in the rare event of a unit failure.

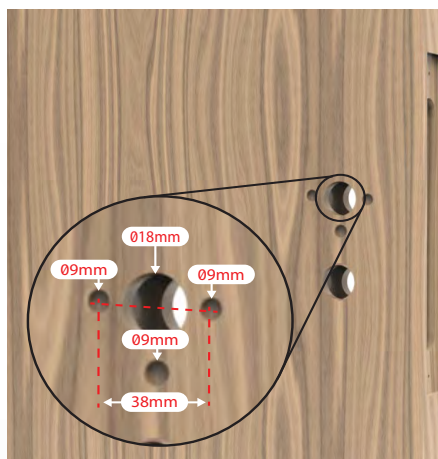

Step 4: Prepare for Installation

Retrieve the PaxLock Pro2 instructions and drilling template from the box.

1. Follow the instructions to mount the template to the door.
2. Check the following:
 - All existing holes are in the correct location and diameter. Correct as required.
 - Mark any new holes required for the PaxLock Pro2, such as the through-door cable hole.

Step 5: Refit and Install

1. Refit the lockset to the door.
2. Proceed with the PaxLock Pro2 installation according to the instructions provided in the box.