

Connecting an HID ProxPro reader to Net2

Overview


The reader is supplied either wired or with screw terminals. The output from the reader can be either Wiegand or Clock & Data depending on the dip switch settings and the bit output from the reader is dependant on the card encoding used. This should be confirmed with HID if unknown, to ensure the correct settings are applied in the Net2 software.

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.



	Cable Pinout	ACU terminal
tb1-1	Red	+12V
tb2-7	-	Red LED
-	-	Amber LED
tb2-6	Blue	Green LED
tb1-3	Green	Wiegand D0
tb1-4	White	Wiegand D1
-	-	NOT USED
tb1-2	Black	0V
tb1-5	Screen	0V

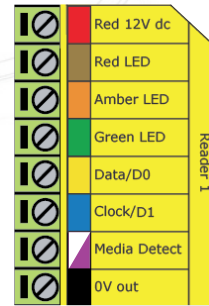

Ensure any unused wires are safely terminated.

Dip switch	Setting
1	On = Wiegand\ Off = Clock and data
2	On = Reader beep\ Off = Silent
3	On
4	Off
5	On
6	On
7	On
8	On



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1(800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support